
STARBAR ACCESSORIES

ELECTRICAL CONNECTORS: Held in place by stainless steel spring clamps, braided aluminum terminal straps in 25, 50, 100, and 200 amperage ratings are available in three primary styles:

Single Loop (A Type) -- for connecting binding post to Starbar.

Double Loop (B Type) -- for connecting Starbar to Starbar.

Post to Post (C Type) -- for connecting binding post to binding post.

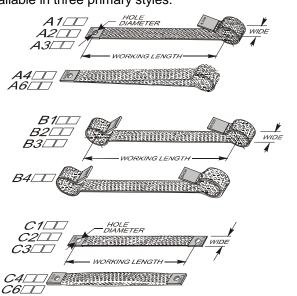

IDENTIFICATION: Aluminum straps are stamped with the part number for easy identification and proper matching to the correct diameter Starbars.

	A, B and C-Type Terminal Straps											
Starbar Diameter		Part Number Designation	Rated Current	W	idth	Hole Diameter A & C Type Only						
MM	Inch	Strap type (A,B, or C)	Amperage	MM	Inch	MM	Inch					
13	0.50	A,B, or C 1	25	13	0.50	7	0.28					
16 19	0.63 0.75	A,B, or C 2	50	17	0.69	10	0.41					
25 32	1.00 1.25	A,B, or C 3	100	33	1.31	14	0.56					
35 38 44 54	1.38 1.50 1.75 2.12	A,B, or C 4	200	33	1.31	14	0.56					
70	2.75	A6 or C6	400	35	1.38	18	0.69					

ORDERING SPECIFICATIONS: A letter A, B, or C identifies the type of strap. The next number indicates the current capacity 1 = 25 amps, 2 = 50 amps, 3 = 100 amps, or 4 = 200 amps. The last two digits indicate the working length in inches. To convert from millimeters to inches, divide by 25.4. Example, 254 mm \div 25.4 = 10 inches. If you have a strap and want to reorder, it is easier to measure the overall length. Subtract the following from the overall length in inches to determine the working length for ordering: Type A1 -3", A2 -3.5", A3 -6", A4 -3", A6 -3.75", B1 -4.87", B2 -7", B3 -10", B4 -14", C1 -0.75", C2 -1", C3, C4 and C6 -1.

AVAILABILITY: Available from stock in one week or less.



Silicon Carbide Heating Elements





92 à 96 rue Paul Lescop F 92000 Nanterre - France Tél. 33 (0)1 47 21 13 17 Fax. 33 (0)1 47 24 54 92 contact@refsas.com WWW.REFSAS.COM

S.A. au capital de 545 000€ RCS Nanterre B 679 800 615 SIRET : 679 800 615 00040 NAF : 2320Z

ARCHITECTE DU CHAUD SUR MESURE

TERM INAL CLAMPS: The terminal clamps are used to hold the aluminum straps in compression around the circumference of the Starbars. The aluminum strap and terminal clamp should be installed at the very end of the Starbar. There are two types of clamps:

- "M" -- which derives its name from its similarity to the letter M, and <u>m</u>anual.
- "T" -- which is used with an expansion tool.


The T type clamp is useful for installations where space is limited.

TEMPERATURE LIMITATION: Clamps are made from heat resistant steel and should never be operated in an ambient temperature over 500°F (260°C).

EXPANSION TOOL: These tools are used for installation and removal of the T type clamps. Besides the standard in-line type there are two special types, a RA <u>right angle</u> and extended in-line type.

IDENTIFICATION: The stainless steel clamps are stamped with a number for easy identification and proper matching to the correct diameter Starbars. The expansion tools have the part numbers marked on the handle.

AVAILABILITY: Most sizes are available from stock. Others can be shipped in one week or quicker for emergencies.

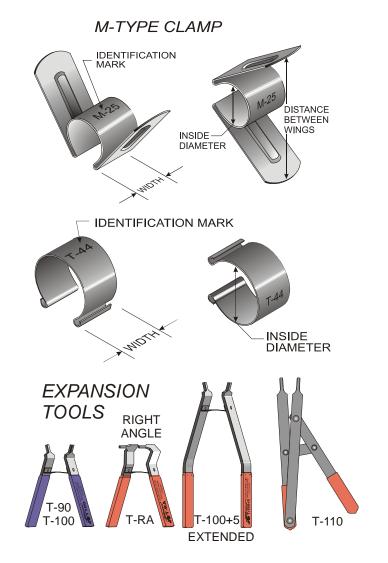

Sta	rbar	M - Type Terminal Clamps T - Type Ter									rminal (*Tool		
		(M) Part Number		side neter	Width		Distance Between Wings		(T) Part Number	Inside Diameter		Width		
MM	Inch	P/N	MM	Inch	MM	Inch	MM	Inch	P/N	MM	Inch	MM	Inch	P/N
7	0.25	<i>M-07</i>	7	0.25	13	0.50	32	1.25	N/A					
10	0.38	M-10	10	0.40	13	0.50	34	1.30	T-10	11	0.40	13	0.50	T-90
11	0.44	M-11/13	13	0.50	13	0.50	37	1.50	T-11/13	13	0.50	13	0.50	T-90
13	0.50	M-11/13	13	0.50	13	0.50	37	1.50	T-11/13	13	0.50	13	0.50	T-90
16	0.63	M-16	16	0.65	13	0.50	56	2.20	T-16	16	0.65	13	0.50	T-90
19	0.75	M-19	19	0.75	19	0.75	58	2.30	T-19	19	0.75	19	0.75	T-90
25	1.00	M-25	25	1.00	25	1.00	77	3.00	T-25	25	1.00	25	1.00	T-90
32	1.25	M-32	30	1.20	32	1.25	81	3.20	T-32	30	1.20	32	1.25	T-100
35	1.38	M-35/38	35	1.40	32	1.25	97	3.80	T-35/38	35	1.40	32	1.25	T-100
38	1.50	M-35/38	35	1.40	32	1.25	97	3.80	T-35/38	35	1.40	32	1.25	T-100
44	1.75	M-44	40	1.60	38	1.50	118	4.60	T-44	40	1.60	38	1.50	T-100
54	2.12	M-54	51	2.00	38	1.50	114	4.50	T-54	51	2.00	38	1.50	T-100
70	2.75	N/A	N/A	N/A	N/A	N/A	N/A	N/A	T-70	63	2.50	38	1.50	T-110
-	The T-100+5 is an extended tool that can be used as a substitute for the T-100. An extended tool is not available for the T-90. *The T-RA (right angle tool) can be used on any of the T-type clamps.													



Tél. 33 (0)1 47 21 13 17 Fax. 33 (0)1 47 24 54 92 contact@refsas.com www.REFSAS.COM

CLAMP STRAP COMBINATION:

The "D" type clamp strap does not require an additional clamp. It is secured around the circumference of the Starbar by the use of a bolt.


The strap connection must be flexible so that no physical stress is transmitted to the Starbars. Avoid using large gauge, heavy wire.

IDENTIFICATION: Some of the D-clamps are stamped with two part numbers. The number on the clamp's end identifies the element diameter in mm. The number on the oposite end is the working length in inches.

ORDERING SPECIFICATIONS: When

ordering D type straps for Starbar diameter 13mm (0.50 inch) to 32mm (1.25 inch) specify the standard D-clamp or optional D-clamp with a long lead. The working length, measured from the center of the Starbar to the center of the hole in binding post, is used to determine the length of the long lead. The 35mm (1.38inch) to 76mm (3.00 inch) Starbar has two 100 amp aluminum braided straps held together by a common end clip. When ordering, specify the working length; minimum is 152mm (6 inch).

AVAILABILITY: Most sizes are available from stock. Others can be shipped in one week or quicker for emergencies.

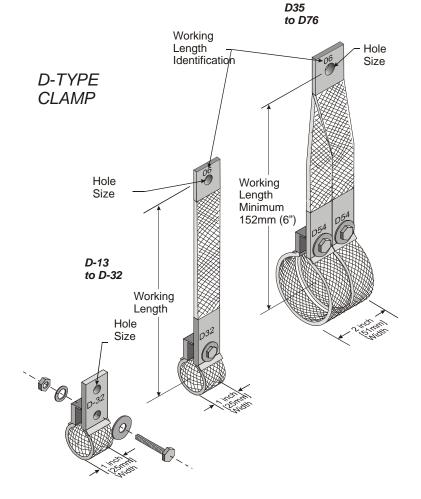

D – Type Clamps												
	rbar neter	Part N	umber	Wid	lth	Rated Current						
MM	Inch	P/N	P/N Long Lead	MM	Inch	Amperage	MM	Inch				
13	0.50	D-13	WL=XX	24	0.95	50	10	0.41				
14	0.56	D-14	WL=XX	24	0.95	50	10	0.41				
16	0.63	D-16	WL=XX	24	0.95	50	10	0.41				
19	0.75	D-19	WL=XX	24	0.95	75	10	0.41				
22	0.88	D-22	WL=XX	24	0.95	100	10	0.41				
25	1.00	D-25	WL=XX	24	0.95	100	10	0.41				
28	1.10	D-28	WL=XX	24	0.95	75	10	0.41				
32	1.25	D-32	WL=XX	24	0.95	100	10	0.41				
35	1.38	D-35	WL=XX	51	2	200	14	0.55				
38	1.50	D-38	WL=XX	51	2	200	14	0.55				
44	1.75	D-44	WL=XX	51	2	200	14	0.55				
50	2.00	D-50	WL=XX	51	2	200	14	0.55				
54	2.12	D-54	WL=XX	51	2	200	14	0.55				
60	2.38	D-38	WL=XX	51	2	200	14	0.55				
64	2.50	D-64	WL=XX	51	2	200	14	0.55				
70	2.75	D-70	WL=XX	51	2	200	14	0.55				
76	3.00	D-76	WL=XX	51	2	200	14	0.55				



Tél. 33 (0)1 47 21 13 17 Fax. 33 (0)1 47 24 54 92

TERMINAL GASKET ASSEMBLY: The

TGA consists of two ceramic fiber washers, one steel washer, and a spring.


The TGA is used as an alternative to packing ceramic fiber insulation around the Starbar cold end. Ceramic fiber insulation is often used at the cold face of the furnace to help reduce furnace energy losses.

There are advantages to using the TGA rather than packing ceramic fiber insulation around the Starbar. Because the TGA is spring-loaded it allows the Starbar freedom of movement. If ceramic fiber is packed too tightly it can cause tremendous physical stresses to be exerted to the Starbars, possibly leading to failures due to breakage. Freedom of movement is important because there is movement between the Starbars and the furnace walls created by different thermal expansion rates.

Installing of TGA is also quicker than packing with ceramic fiber.

Neither of these methods are intended to be an atmosphere seal. It is to help reduce radiant energy losses, and to a smaller degree some convection heat losses.

There are two free spring lengths, 1 inch (25mm) and 3 inches (75mm). The last digit of the part number is used to call out the free spring length. **AVAILABILITY:** Most sizes are available from stock. Others can be shipped in one week, or quicker for emergencies.

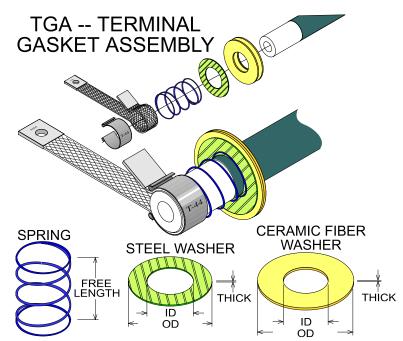

Note: The strap and clamp are shown for illustrative purposes and are not supplied with the TGA assembly.

			TER	ASSEMBLY							
Sta	Starbar * Part			Steel Washer			Steel		nic Fiber	Ceramic	
Diameter Number		ID			Washer OD		Wa	sher ID	Fiber		
										Washer OD	
MM	Inch		MM	Inch		MM	Inch	MM	Inch	MM	Inch
10	0.38	TGA-10	11	-	44	25	1.00	9.5	0.38	32	1.25
11	0.44	TGA-11	13		50	32	1.25	11	0.44	38	1.50
13	0.50	TGA-13	14	0.	56	32	1.25	13	0.50	38	1.50
16	0.63	TGA-16	17	0.	69	33	1.32	16	0.63	44	1.75
19	0.75	TGA-19	21	0.	84	38	1.50	19	0.75	44	1.75
25	1.00	TGA-25	27	7 1.06		55	2.15	25	1.00	64	2.50
32	1.25	TGA-32	33	1.	31	70	2.75	30	1.18	83	3.25
35	1.38	TGA-35	36	1.	44	70	2.75	35	1.38	83	3.25
38	1.50	TGA-38	40	1.	56	70	2.75	37	1.44	83	3.25
44	1.75	TGA-44	47	1.	88	84	3.31	43	1.69	95	3.75
54	2.12	TGA-54	56	2.	20	84	3.31	51	2.00	101	4.00
64	2.50	TGA-64_	63	2.	50	105	4.12	63	2.50	114	4.50
70	2.75	TGA-70	73	2.	88	105	4.12	70	2.75	114	4.50
For A	ll TGA:		MM			nch					
Free	Spring L	25 or 75		1 or 3							
Cerar	nic Fibe	Approx. Ap			prox.	1					
Thick	ness				125						
	* The last digit of the part number represents the Free Spring Length in Inches, either 1 or 3.										
		urchased separate									
		ceramic fiber wash , and TS1 or									
~,	, . •	,			-						

I SQUARED R ELEMENT CO., INC.

PO Box 390, 12600 CLARENCE CENTER ROAD, AKRON, NEW YORK, USA 14001-0390 Email: <u>sales@isquaredrelement.com</u>, web site: www.isquaredrelement.com

PHONE (01) 716 542 5511 FAX (01) 716-542-2100

SAS FOURS ET RÉFRACTAIRES

92 à 96 rue Paul Lescop F 92000 Nanterre - France Tél. 33 (0)1 47 21 13 17 Fax. 33 (0)1 47 24 54 92 contact@refsas.com www.REFSAS.COM